

gabb Z²
WIRELESS



User manual

About This Guide

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

Copyright

Copyright © 2020 ZTE CORPORATION

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this manual without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.zteusa.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation.

The *Bluetooth*[®] word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by ZTE Corporation is under license.

microSDXC Logo is a trademark of SD-3C, LLC.

Other trademarks and trade names are those of their respective owners.



Version No.: R1.0

Edition Time: July 31, 2020

Contents

Getting Started	9
Getting to Know Your Phone	9
Key Functions	11
Installing a nano-SIM Card and an Optional microSDXC Card ...	12
Installing the Battery.....	14
Charging the Battery.....	15
Powering Your Phone On/Off.....	16
Locking/Unlocking the Screen and Keys	16
Getting to Know the Home Screen.....	18
 Personalizing.....	 20
Changing the System Language	20
Setting the Date and Time	20
Changing the Ringtone, Notification Sound, or Alarm Sound ...	21
Turning System Sounds On/Off	22
Adjusting Volumes.....	22
Switching to Silent or Vibration Mode.....	22
Using Do Not Disturb Mode.....	23
Applying New Wallpapers.....	24
Setting the Home Screen Options	25
Changing the Screen Brightness	25
Using Night Light	26
Protecting Your Phone With Screen Locks	26
Protecting Your Phone With Screen Pinning.....	27

Using Your Fingerprint	28
Knowing the Basics	30
Monitoring the Phone Status.....	30
Managing Notifications	31
Managing Shortcuts and Widgets.....	34
Organizing With Folders	35
Rearranging the Primary Shortcuts	35
Opening and Switching Apps.....	36
Using Two Apps in Split-Screen Mode.....	37
Connecting to Networks and Devices	38
Connecting to Mobile Networks	38
Connecting to Wi-Fi.....	39
Connecting to <i>Bluetooth</i> Headsets	41
Connecting to Your Computer via USB	42
Using the microSDXC Card as Portable or Device Storage.....	43
Phone Calls	48
Placing and Ending Voice Calls.....	48
Answering or Rejecting Voice Calls.....	49
Using Real-Time Text (RTT)	50
Working With the Call History.....	52
Calling Your Contacts.....	54
Checking Voicemail	54
Using Options During a Call	55
Managing Multi-party Calls	56

Contacts	58
Checking Contact Details	58
Adding a New Contact	58
Working With Favorite Contacts	58
Managing Contacts With Labels	59
Managing Emergency Contacts and Information	60
Searching for a Contact	61
Editing Contacts	62
Messaging	64
Opening the Messaging Screen	64
Sending a Message	64
Replying to a Message	65
Forwarding a Message	65
Deleting Messages or Conversations	66
Camera	67
Capturing a Photo	67
Using Manual Camera Mode	70
Recording a Video	70
Customizing Camera and Video Settings	71
Gallery	74
Opening Gallery	74
Working With Albums	74
Working With Pictures	74
Retouching Your Pictures	76

Music	78
Viewing Your Music Library	78
Playing Music.....	78
Managing Playlists.....	80
Video Player.....	81
Opening the Video Library.....	81
Playing and Controlling Videos.....	81
Managing Video Files.....	82
Voice Recorder.....	84
Recording a Voice Memo.....	84
Playing a Voice Memo.....	85
Trimming a Voice Memo.....	85
More Apps.....	86
Calculator.....	86
Calendar	86
Clock.....	86
File Manager	88
FM Radio.....	89
Settings.....	91
Network.....	91
Connected Devices.....	92
Battery.....	92
Features	93
Display.....	93

Sound	93
Storage.....	94
Privacy.....	94
Location.....	94
Security.....	95
Accessibility.....	96
System.....	96
About Phone.....	97


Troubleshooting98


For Your Safety 103

General Safety	103
Radio Frequency (RF) Energy	104
FCC Regulations.....	106
Hearing Aid Compatibility (HAC) Regulations for Mobile Phones	107
CTIA Requirements	109
Distractions	110
Product Handling.....	111
Electrical Safety.....	116
Radio Frequency Interference	116
Explosive Environments.....	118

Getting Started

Getting to Know Your Phone

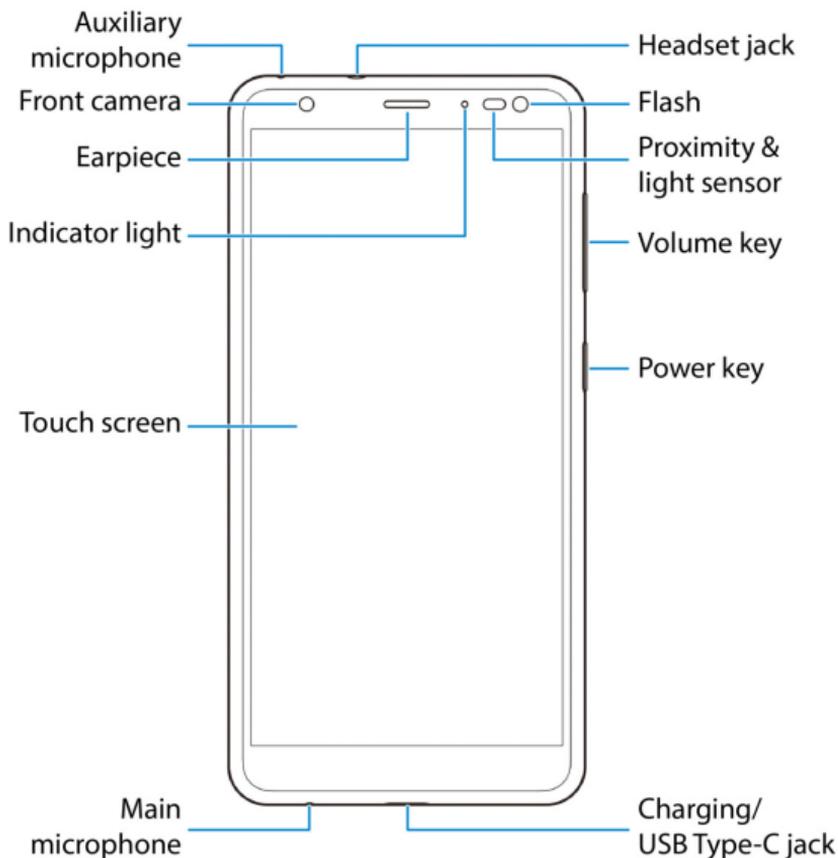

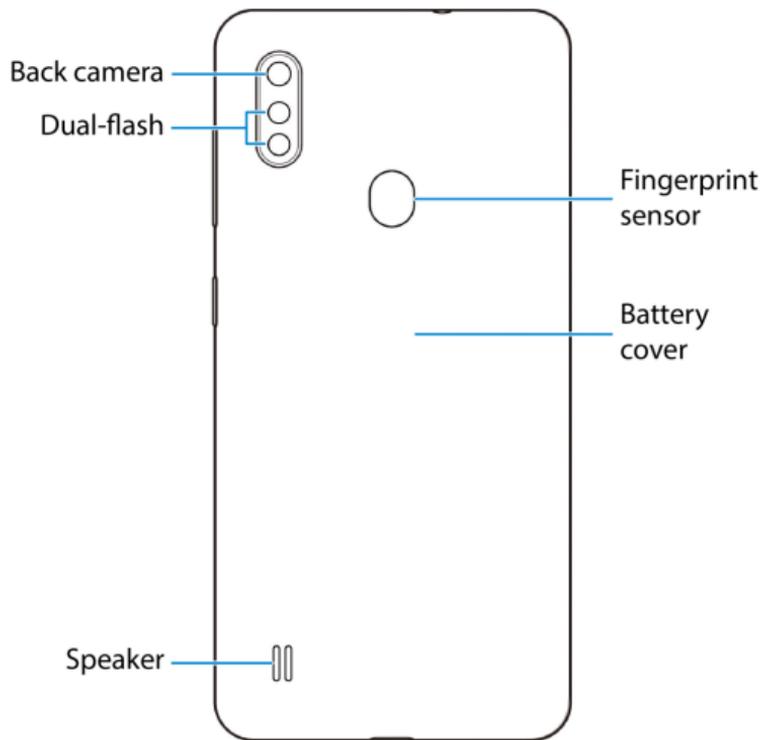

Key Functions

Key	Function
Power key	<ul style="list-style-type: none">• Press and hold to power on, restart, or power off.• Press to switch your phone to sleep mode or wake up your phone.
Volume key	Press or hold either end of the key to turn the volume up or down.
 (Home key)	Touch to return to the home screen from any application or screen.
 (Recent apps key)	<ul style="list-style-type: none">• Touch to see recently used applications.• Touch twice to switch between the two most recent applications.
 (Back key)	Touch to go to the previous screen.

NOTE:

You can replace the **Home** key, the **Recent apps** key, and the **Back** key with the gesture navigation style. Swipe up on the home screen and touch **Settings > Features > System navigation** to change the navigation bar styles, see tutorials, and personalize settings.


Installing a nano-SIM Card and an Optional microSDXC Card

The nano-SIM card can be installed or removed while the phone is turned on.


WARNING!

To avoid damage to the phone, do not use any other kind of SIM cards, or any non-standard nano-SIM card cut from a SIM card. You can get a standard nano-SIM card from your service provider.

1. Place your finger in the cut-out at the bottom right of the battery cover to lift and remove it.

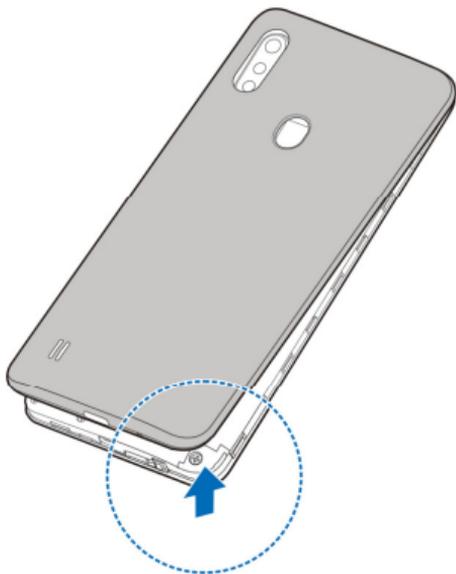

2. Hold the nano-SIM card with the cut corner oriented as shown and the microSDXC card with the metal contacts facing down and slide them into the card slots.

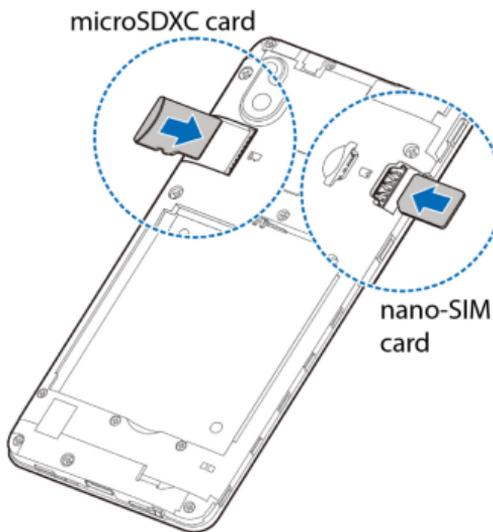


 **NOTE:**

Some applications may require a microSDXC card to work normally and/or may store data on the card. Therefore, it is recommended that you keep a microSDXC card installed and not remove or replace it randomly.

3. Replace the cover over the back of the phone, and then press down along the edges to secure. Make sure there is no gaps around.

Installing the Battery

1. Place your finger in the cut-out at the bottom right of the battery cover to lift and remove it.
2. Insert the battery by aligning the metal contacts on the battery with the metal contacts in the battery compartment. Gently push down on the battery until it clicks into place.

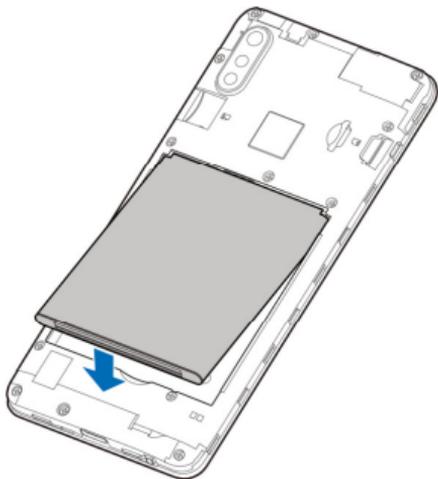

3. Replace the cover over the back of the phone, and then press down along the edges to secure. Make sure there is no gaps around.


Charging the Battery

Your phone's battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.

WARNING!

Use only ZTE-approved chargers and USB Type-C cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

1. Connect the adapter to the charging jack.

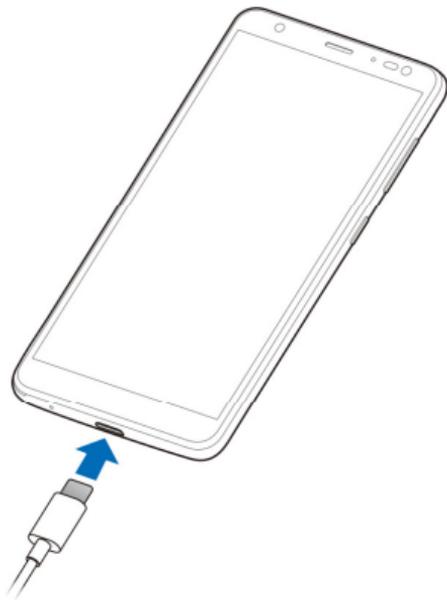

2. Connect the charger to a standard AC power outlet. If the phone is on, you'll see a charging icon, such as  or  , appear in the status bar.
3. Disconnect the charger when the battery is fully charged.

 **NOTE:**

If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 20 minutes. Contact customer service if you still cannot power on the phone after prolonged charging.

Powering Your Phone On/Off

- Press and hold the **Power** key to turn on your phone.
- To turn it off, press and hold the **Power** key to open the options menu and touch  > .

Locking/Unlocking the Screen and Keys

Your phone allows you to quickly lock the screen and keys (put the phone to Sleep mode) when not in use and also to turn the screen back on and unlock it when you need it.

Lock the Screen and Keys

To quickly turn the screen off and lock the keys, press the **Power** key.

 **NOTE:**

To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone screen is off.

Unlock the Screen and Keys

1. Press the **Power** key to turn the screen on.
2. Swipe up on the screen.

- or -

Swipe away from  at the bottom right of the screen to open the Camera app.

- or -

Double-tap a notification to open the related app.

NOTE:

If you have set a fingerprint, an unlock pattern, a PIN, or a password for your phone (see [Using Your Fingerprint](#) and [Protecting Your Phone With Screen Locks](#)), you can unlock the screen by:

- Touching the fingerprint sensor
- Swiping up on the screen and draw the pattern or enter the PIN/password

Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding shortcuts, folders, widgets, and more.



Extended Home Screen Panels

Your home screen is extendable, providing more space for shortcuts, widgets, and more. Add a few extended home screen panels and you can swipe left or right to switch between panels. You can also remove some panels or adjust their order.

NOTE:

Swipe right on the left-most panel to use the Google app.

To add a new home screen panel:

1. Touch and hold an empty area of the home screen.
2. Swipe left on the home screen thumbnails and touch .

To delete a home screen panel:

1. Touch and hold an empty area of the home screen.
2. Touch  on the top right corner of a home screen thumbnail.
3. If prompted, touch **OK**. The items on the panel will also be removed.

To adjust the order of a home screen panel:

1. Touch and hold an empty area of the home screen.
2. Touch and hold a home screen thumbnail and drag it left or right to the place you need.

NOTE:

Touch  at the top of a home screen thumbnail to set it as the main home screen.

Personalizing

Changing the System Language

1. Swipe up on the home screen and touch **Settings > System > Languages & input > Languages**.
2. Touch and hold the language you need and drag it to the top to switch to that language.
To add a system language, touch **Add a language** and then the language you need.

Setting the Date and Time

1. Swipe up on the home screen and touch **Settings > System > Date & time**.
2. Set the date, time, time zone, and time format.
 - ▶ To adjust the date and time automatically, touch to turn on **Use network-provided time**.
 - ▶ To adjust the date and time manually, touch to turn off **Use network-provided time** and touch **Date/Time** to change the date and time.
 - ▶ To adjust the time zone automatically, touch to turn on **Use network-provided time zone**.
 - ▶ To adjust the time zone manually, touch to turn off **Use network-provided time zone** and touch **Time zone** to set the correct time zone.

- ▶ To adjust the time format, touch to turn on **Use locale default** or turn off this option and switch on/off **Use 24-hour format**.

Changing the Ringtone, Notification Sound, or Alarm Sound

You can customize the default ringtone for incoming calls, the default notification sound, and the default alarm sound.

1. Swipe up on the home screen and touch **Settings > Sound > Advanced > Ringtones**.
2. Touch **Phone ringtone**, **Default notification sound**, or **Default alarm sound**.
3. Scroll through the list and select the ringtone you'd like to use.
4. Touch **OK**.



NOTES:

- Many applications have their own notification sound settings.
- See [Set a Ringtone for a Contact](#) for how to assign a special ringtone to an individual contact.
- When selecting ringtones, touch **Add ringtone / Add notification / Add alarm** to select an audio file on your phone or microSDXC card.

Turning System Sounds On/Off

1. Swipe up on the home screen and touch **Settings > Sound > Advanced**.
2. In the **Other sounds and vibrations** section, touch the switches beside each option to turn it on or off.

Adjusting Volumes

1. Swipe up on the home screen and touch **Settings > Sound**.
2. Drag the sliders below **Media volume, Ring volume, Alarm volume, Notification volume,** and **Call volume** to adjust the volume for each type of audio.

Switching to Silent or Vibration Mode

You can set the phone to silent or vibration mode by using one of the following methods.

NOTE:

Silent and vibration modes will not silence your alarms.

- Press the **Volume** key and touch  or  to switch the phone to vibration or silent mode.

NOTE:

Press the **Volume** key and touch  to restore sound.

- Swipe up on the home screen and touch **Settings > Sound > Notification mode** and select **Vibrate** or **Mute** to switch to vibration or silent mode.

 **NOTE:**

Select **Ring** to restore sound.

- Swipe down from the top of the screen to open the notification panel and drag the panel downwards to open Quick Settings. Touch **Ring** or **Vibrate** to switch the phone to vibration or silent mode. See [Use Quick Settings](#).

 **NOTE:**

Touch **Silent** to restore sound.

Using Do Not Disturb Mode

You can limit interruptions with Do Not Disturb mode. This mode silences your phone so that it doesn't make sounds or vibrate when you don't want it to.

Turn on Do Not Disturb Mode

1. Swipe down from the top of the screen with two fingers to access the Quick Settings panel.
2. Swipe left and right to find the "Do Not Disturb" icon and touch it.

Set Do Not Disturb Mode

1. Swipe up on the home screen and touch **Settings > Sound > Do Not Disturb**.
2. Touch the following options as you need.
 - ▶ **Calls:** Set allowed disturbance from calls when Do Not Disturb mode is on. The phone may not ring, vibration, or

show any notification when other calls come in.

- ▶ **SMS, MMS, and messaging apps:** Set allowed disturbances from messages. The phone may not ring, vibrate, or show any notification when other messages come in.
- ▶ **See all exceptions:** Set allowed disturbance from alarms, media sounds, touch sounds, reminders, and events.
- ▶ **Restrict notifications:** Set limits for notifications. You can forbid sound or visuals or customize more restrictions.
- ▶ **Default duration:** You can set a default duration for turning off Do Not Disturb mode.
- ▶ **Schedules:** Use schedules to turn on/off Do Not Disturb mode automatically. Touch an existing schedule to use it, or  next to it edit or delete it. You can also touch **Add more** to create new schedules.

Applying New Wallpapers

You can set the wallpaper for the home screen and lock screen.

1. Touch and hold an empty place on the home screen.
2. Touch **WALLPAPERS**.
3. Select a built-in static wallpaper along the bottom, or touch **My photos** to select a picture on which you can pan and zoom to choose the area you need.
4. Touch **SET WALLPAPER**.
5. Choose where the wallpaper should be used by touching **Home screen**, **Lock screen**, or **Home screen and lock screen**.

 **NOTE:**

You can also set the wallpaper by opening the **Settings** app and selecting **Display > Wallpaper**.

Setting the Home Screen Options

1. Touch and hold an empty place on the home screen.
2. Touch **HOME SETTINGS**.
3. Customize the following home screen options.
 - ▶ **App badge:** Show or hide notification dots on the app icons.
 - ▶ **Home screen effect:** Select the home screen transition effect.
 - ▶ **Icon layout:** Set the maximum number of icons on a home screen panel.
 - ▶ **Themes:** Select a theme for the icons.

Changing the Screen Brightness

1. Swipe up on the home screen and touch **Settings > Display > Brightness level**.
2. Drag the slider to manually adjust the screen brightness.

 **NOTE:**

With the light sensor, your phone can automatically adjust the screen brightness for available light. Touch **Adaptive brightness** in the Display settings screen to turn the feature on or off.

Using Night Light

You can enable Night Light to tint the screen amber for eye protection.

1. Swipe up on the home screen and touch **Settings > Display > Night Light**.
2. Touch **TURN ON NOW** and adjust the intensity bar to a comfortable level.



NOTE:

If you want the phone to turn on/off Night Light automatically, touch **Schedule** to set the start and end time.

Protecting Your Phone With Screen Locks

You can protect your phone by creating a screen lock. When it is enabled, you can swipe up on the lock screen, and then draw a pattern or enter a numeric PIN or password to unlock the phone's screen and keys.

1. Swipe up on the home screen and touch **Settings > Security > Screen lock**.
2. Touch **None, Swipe, Pattern, PIN, or Password**.
 - ▶ Touch **None** to disable screen lock protection.
 - ▶ Touch **Swipe** to enable screen lock and allow unlocking with a "swipe" gesture. You can unlock the screen by touching the display and sliding up.
 - ▶ Touch **Pattern** to create a pattern that you must draw to unlock the screen.

- ▶ Touch **PIN** or **Password** to set a numeric PIN or a password that you must enter to unlock the screen.
- 3. For Pattern, PIN, or Password, select how you want notifications and their contents to show when the phone is locked, and then touch **DONE**.

Protecting Your Phone With Screen Pinning

You can use the screen pinning feature to keep an app in view, so others cannot switch to other apps or access your personal information.

Turn On Screen Pinning

1. Swipe up on the home screen and touch **Settings** > **Security** > **Screen pinning**.
2. Touch the **On/Off** switch.
3. To automatically lock the phone after unpinning, switch on **Lock device when unpinning** and set up a screen lock.

If you have set a screen lock, you can switch on **Ask for unlock pattern/PIN/password before unpinning**.

Pin a Screen

1. Ensure that screen pinning is turned on.
2. Touch the **Recent apps** key to view recent apps. If the app you want to keep in view is not in recent apps, open it first.
3. Swipe left and right to find the app card. Then touch  > **Pin** at the top of the card.

Unpin the Screen

1. To unpin the screen and return to normal use, touch and hold both the **Back** key and the **Recent apps** key.
2. If the screen is locked, swipe up on the lock screen and draw the pattern, enter the PIN/password, or touch the fingerprint sensor with a registered finger.

Using Your Fingerprint

Register a Fingerprint

1. Swipe up on the home screen and touch **Settings > Security > Fingerprint > Fingerprint management**.
2. If you have not set a screen lock, choose one backup screen lock method to set the screen lock pattern, PIN, or password. If you have already set a screen lock, draw the pattern or enter the PIN/password.
3. Touch **REGISTER** or **Add fingerprint**.
4. Follow the prompts to record the center and the edges of a finger.
5. Touch **OK** when your fingerprint has been registered.

 **NOTE:**

Touch an existing fingerprint record to change its name or delete it.

Set Fingerprint Actions

1. Swipe up on the home screen and touch **Settings > Security > Fingerprint > Fingerprint management**.
2. Enter the screen lock pattern, PIN or password you set.
3. You can set the following fingerprint actions.
 - ▶ **Wake up and unlock your phone:** Wake up the phone and unlock it with a registered fingerprint.
 - ▶ **Simple touch:** When the screen is off or locked, you can quickly open a selected app with a registered fingerprint. Each registered fingerprint can be bound to a different app.



NOTE:

You can also use any finger, registered or not, to open the notification panel or view recent apps by swiping on the fingerprint sensor. Open **Settings > Security > Fingerprint** to set them up.

Knowing the Basics

Monitoring the Phone Status

The status bar at the top of the home screen provides phone and service status icons on the right side. Below are some of the icons you may see.

Indicator	What it means
LTE	4G LTE data service
↕	Mobile data in use
⊖	Do not disturb mode on
	Vibration only mode on
	Silent mode on
	Battery low
	Battery full
	Battery charging
	Alarm set
	Signal strength

	Airplane mode
	Connected to a Wi-Fi network
	Speaker on
	Phone microphone off
	Wired headset connected

Managing Notifications

The status bar at the top of the home screen provides notification icons on the left. Below are some of the icons you may see.

Indicator	What it means
	New message
	Missed call
	Call in progress
	Upcoming event
	New Wi-Fi network detected
	Song playing

Open/Close the Notification Panel

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events. You can open the notification panel to view the details of notifications.

- To open the notification panel, swipe your finger down on the home screen or from the top of the screen.
- To close the notification panel, swipe your finger up on the screen or touch the **Back** key.

Respond to or Remove a Notification

In the notification panel, you can respond to a notification or remove the notifications. The notification panel also supports expandable notifications that let you perform additional actions right from the notification itself.

- To respond to a notification, touch it.
- Slide down with one finger to expand certain notifications. You can also swipe two fingers vertically or pinch-zoom to expand or collapse certain notifications, or touch / to expand or collapse certain notifications and bundled notifications.
- To remove a notification, swipe it left or right.
- To remove all nonpersistent notifications, touch **CLEAR ALL** below all the notifications.
- To manage notifications you have received, touch and hold a notification or slide it left or right a little and touch , and then choose to turn off or silence this type of notification. Or, touch  again to customize more notification settings for the app.

 **NOTE:**

If you turn off notifications for an app, you may miss its important alerts and updates. Some notifications (such as those from the system) cannot be turned off.

Use Quick Settings

The Quick Settings make it convenient to view or change the most common settings for your phone.

Swipe down with two fingers from the top of the screen, or open the notification panel and drag the panel downward to view the Quick Settings. You can swipe left or right to find all Quick Settings tiles.

To turn on or off settings quickly:

From the Quick Settings panel, touch a tile to turn its feature on or off.

Touch and hold certain tiles to access more settings options. For example, touch and hold the Wi-Fi tile to open Wi-Fi settings.

To customize the quick settings panel:

You can add, remove or rearrange the tiles on the Quick Settings panel.

Touch  below the panel and do one of the following:

- Touch and hold a tile and drag it to the position you want.
- Touch and hold a tile and drag it below “DRAG HERE TO REMOVE” to hide it.
- In the **HOLD AND DRAG TO ADD TILES** section, drag a tile up to show it in the Quick Settings panel.

Managing Shortcuts and Widgets

Add Shortcuts and Widgets

1. To add a shortcut, swipe up on the home screen.
To add a widget, touch and hold an empty area of the home screen and select **WIDGETS**.
2. Slide to browse the available applications or widgets.
3. Touch and hold a widget or an application icon and drag it to a home screen panel.

NOTE:

While holding the shortcut or widget, you can drag it to the right edge of the screen to create a new home screen panel and put the item on it.

Move Shortcuts or Widgets

1. Touch and hold a shortcut or widget on the home screen.
2. Drag it to the place you need.

Remove Shortcuts or Widgets

1. Touch and hold a shortcut or widget on the home screen.
2. Touch **Remove**.

Organizing With Folders

You can create folders on the home screen and add several shortcuts to a folder.

You can move or remove folders the same way as moving or removing shortcuts.

1. On the home screen, touch and hold the shortcut you want to add into a folder.
2. Drag the shortcut over another and release your finger. A new folder will be created and both shortcuts are added into the folder.
3. To add more shortcuts into the folder, touch and hold each shortcut and drag it over the folder before releasing it.



NOTES:

- To remove a shortcut from a folder, first touch the folder and then drag the shortcut to the home screen.
- Touch the folder and then touch the name field to rename the folder.

Rearranging the Primary Shortcuts

The home screen includes a customizable primary shortcuts area near the bottom above the navigation bar. You can keep up to five items in the primary shortcuts area visible from all home screens. Drag shortcuts or folders in or out of the area to rearrange them.

Opening and Switching Apps

Open an App

1. Swipe up on the home screen.
2. Swipe up or down on the screen and touch an app to open it.



NOTES:

- Touch  in the search box to sort the apps alphabetically, by the time they are installed, or by frequency of use.
- Some apps allow you to touch and hold the app icon and access shortcuts to common features. You can also drag these shortcuts to the home screen as shortcut icons.

Switch Between Recently Opened Apps

1. Touch the **Recent apps** key. The apps you've used recently are displayed as a series of cards. Slide left and right to see all the cards.
2. Touch a card to open that app.



NOTES:

- You can swipe a card up to remove it from the screen. Touch **CLEAR ALL** to remove all cards.
- Touch the **Recent apps** key twice to switch to the most recent app you used.

Using Two Apps in Split-Screen Mode

You can work with two apps at the same time in split-screen mode.

 **NOTE:**

Some apps may not support split-screen mode.

1. Open the first app you want to use and touch the **Recent apps** key.
2. On top of the card of the first app, touch  > **Split screen**.
3. Touch the second app among the recent app cards or touch the **Home** key and swipe up to select the second app.

Drag the middle of the border between the two apps to adjust window size or exit split-screen mode.

Connecting to Networks and Devices

Connecting to Mobile Networks

Select Preferred Network Type

1. Swipe up on the home screen and touch **Settings > Network > Mobile network > Advanced > Preferred network type**.
2. Touch the type of network you prefer to connect to.

 **NOTE:**

The Preferred network type option is displayed only when this feature is available. Please check with your mobile service provider whether this feature is available.

Select Network Operator

1. Swipe up on the home screen and touch **Settings > Network > Mobile network > Advanced > Automatically select network**.
2. Touch a network found to register manually.

Check Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). Swipe up on the home screen and touch **Settings > Network > Mobile network > Advanced > Access Point Names** to check the default APN.

 **NOTE:**

To set the APN to default settings, touch  > **Reset to default**.

Connecting to Wi-Fi

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 300 feet (100 meters), depending on the Wi-Fi router and your surroundings.

Turn Wi-Fi On and Connect to a Wi-Fi Network

1. Swipe up on the home screen and touch **Settings > Network > Wi-Fi**.
2. Slide the **Use Wi-Fi** switch to the On position to turn on Wi-Fi.
3. Touch a network name to connect to it.
4. If the network is secured, enter the password and touch **CONNECT**.



NOTES:

- Your phone automatically connects to previously used Wi-Fi networks when they are in range.
- If you have a QR code for the Wi-Fi network, touch  next to the Password field and scan the QR code to connect.

Get Notified of Open Networks

1. Swipe up on the home screen and touch **Settings > Network > Wi-Fi**.
2. Touch **Wi-Fi preferences**.
3. Slide the **Wi-Fi notification** switch to the On position.

When Wi-Fi is on, you receive notifications in the status bar when your phone detects an open Wi-Fi network. Switch off this option to turn off notifications.

Add a Wi-Fi Network

You can add a Wi-Fi network if the network does not broadcast its name (SSID) or to add a Wi-Fi network when you are out of range.

To connect to a secured network, you first need to get the security details from the network's administrator.

1. Swipe up on the home screen and touch **Settings > Network > Wi-Fi**.
2. Slide the **Use Wi-Fi** switch to the On position.
3. At the bottom of the available Wi-Fi networks, touch **Add network**.
4. Enter the network SSID (name). If necessary, enter security or other network configuration details.
5. Touch **SAVE**.

Forget a Wi-Fi Network

You can make your phone forget about the details of a Wi-Fi network that you added—for example, if you don't want the phone to connect to it automatically or if it is a network that you no longer use.

1. Swipe up on the home screen and touch **Settings > Network > Wi-Fi**.
2. Touch **Saved networks**.
3. Touch the Wi-Fi network name and then touch **FORGET**.

Connecting to *Bluetooth* Headsets

Bluetooth is a short-range wireless communication technology. Phones or other devices with *Bluetooth* capabilities can exchange information wirelessly within a few feet. The *Bluetooth* devices must be paired before the communication is performed.

Change the Device Name

1. Swipe up on the home screen and touch **Settings > Connected devices > Connection preferences > Bluetooth**.
2. Slide the **Bluetooth** switch to the **On** position if *Bluetooth* is off.
3. Touch **Device name**.
4. Edit the name and touch **OK**.

Pair With Another *Bluetooth* Device

1. Swipe up on the home screen and touch **Settings > Connected devices > Pair new device**.

Your phone automatically turns *Bluetooth* on and scans for and displays the IDs of all available *Bluetooth* devices in range.

2. Touch the device you want to pair with.
3. If necessary, confirm that the *Bluetooth* passkeys are the same between the two devices and touch **PAIR**. Alternatively, enter a *Bluetooth* passkey and touch **PAIR**.

Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.

 **NOTE:**

The *Bluetooth* passkey may be fixed for certain devices, such as headsets and hands-free car kits. You can try entering 0000 or 1234 (the most common passkeys) or refer to the documents for that device.

Forget a *Bluetooth* Device

You can make your phone forget its pairing connection with another *Bluetooth* device. To connect to the device again, you need to search for it and enter or confirm a passkey again.

1. Swipe up on the home screen and touch **Settings > Connected devices**.
2. Ensure that Bluetooth is turned on and, in the list of **Previously connected devices**, touch  beside the one you want to forget.
3. Touch **FORGET > FORGET DEVICE**.

Connecting to Your Computer via USB

You can connect your phone to a computer with a USB cable to transfer pictures and videos from the phone to your computer.

Connect Your Phone to a Computer via USB

1. Connect your phone to the PC with a USB cable. The **Use USB for** options window will automatically pop up.
2. Choose one of the following options:
 - ▶ **PTP:** Transfer photos and videos.
 - ▶ **Charge this device:** Charge your phone via USB.

Disconnect Your Phone From the Computer

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

Using the microSDXC Card as Portable or Device Storage

You can use your microSDXC card as portable storage when there's already content such as your media and other files so that you don't lose them.

If your microSDXC card is new or doesn't have content you want to keep, you can also set it up as extra phone storage, and this requires formatting that prevents the microSDXC card from working with other devices.

CAUTION:

As part of the device storage, the microSDXC card may have data on it that is necessary for some apps to function normally. Therefore, do not remove or replace the card randomly.

Set Up the microSDXC Card as Portable Storage

When you install a microSDXC card that has not been used on your phone before, the phone will mount the card as portable storage by default.

To remove the microSDXC card from your phone:

If you need to remove the microSDXC card used as portable storage while the phone is on, you must unmount it first.

1. Swipe up on the home screen and touch **Settings > Storage**.
2. Touch  next to the microSDXC card name in the Portable storage section.
3. When the screen prompts the card is safely ejected, you can remove it from the phone.

To erase and format the microSDXC card:

1. Swipe up on the home screen and touch **Settings > Storage**.
2. Touch the microSDXC card name in the Portable storage section.
3. Touch **Format > FORMAT SD CARD**.
4. Touch **Done** when formatting is finished.

CAUTION:

The formatting procedure erases all the data on the microSDXC card, after which the files CANNOT be retrieved.

Set Up the microSDXC Card as Device Storage

If you need your microSDXC card to store large applications, games, and their data, you can format the card and use it as extra phone storage.

CAUTION:

With this option, you cannot swap the microSDXC card freely with other devices. If you move the card to another device, you must

format the card before using it.

1. Swipe up on the home screen and touch **Settings > Storage**.
2. Touch the microSDXC card name in the Portable storage section.
3. Touch **Format as internal > FORMAT SD CARD**.

 **CAUTION:**

The formatting procedure erases all the data on the microSDXC card, after which the files CANNOT be retrieved.

4. The phone will prompt you to move your photos, files and other data from the phone to the microSDXC card. Select **Move content** or **Move content later**. Follow the onscreen instructions to continue.
5. Touch **Done**.

To move data between the phone and the microSDXC card:

With the microSDXC card as part of the device storage, you can move your photos, files and other data between the phone and the card any time.

1. Swipe up on the home screen and touch **Settings > Storage**.
2. To move data from the phone to the microSDXC card, touch the microSDXC card name; to move data from the card to the phone, touch **Internal shared storage**.
3. Touch  **> Migrate data > Move content**.
4. After data is moved, touch **Done**.

 **NOTE:**

Whenever you move data between the phone and the microSDXC card, the destination is used to save new apps and personal data (such as photos and videos) and only the destination is accessible from a computer.

To remove the microSDXC card from your phone:

If you need to remove the microSDXC card used as device storage while the phone is on, you must unmount it first.

1. Swipe up on the home screen and touch **Settings > Storage**.
2. Touch your microSDXC card name below **Device Storage**.
3. Touch  > **Eject**.

 **NOTE:**

Before ejecting the card, ensure that you have moved data and apps to the phone.

4. Touch **EJECT**.
5. When the screen prompts the card is safely ejected, you can remove it from the phone.

To reformat the microSDXC card as portable storage:

If you no longer want to use your microSDXC card as device storage, you can reformat the card as portable storage.

 **NOTE:**

Before the formatting, ensure that you have moved data and apps to the phone.

1. Swipe up on the home screen and touch **Settings > Storage**.
2. Touch your microSDXC card name below **Device Storage**.
3. Touch  > **Format as portable**.
4. Touch **FORMAT**.
5. Touch **Done**.

 **CAUTION:**

The formatting procedure erases all the data on the microSDXC card, after which the files CANNOT be retrieved.

Phone Calls

You can place calls from the Phone app, the Contacts app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually touch it to dial.

Placing and Ending Voice Calls

Place a Voice Call by Dialing

1. From the home screen, touch  > .
2. Enter the phone number or the contact name with the dialpad. Touch  to delete incorrect digits/letters.

 **NOTE:**

As you enter the phone number or the contact name, your phone searches for matching information in your contacts. If you see the number and contact you want to call, touch it to place the call immediately.

3. Touch  below the keypad to dial the call.

 **NOTES:**

- To make an international call, touch and hold the **0** key to enter the plus (+) symbol. Next, enter the country code followed by the city/area code and then the phone number.
- To redial the last call you made, open the dialpad, touch  and touch  again.

End a Call

During a call, touch  on the screen.

Answering or Rejecting Voice Calls

When you receive a voice call, the incoming call screen opens, displaying the Caller ID or the information about the caller that you've entered in the Contacts app. You can answer or reject the call, or reject it with a text message.

Answer a Voice Call

To answer an incoming call,

- If the phone screen is active, touch **ANSWER**.
- If the phone screen is locked, swipe up on the screen to answer the call.

NOTES:

- To silence the ringer before answering the call, press the **Volume** key or the **Power** key.
- For instructions on answering a call with RTT, see [Answer an RTT Call](#).

Reject a Voice Call

To reject an incoming voice call:

- If the phone screen is active, touch **DECLINE** to reject the call, or touch **MESSAGE** to reject the call and send a message to the caller.

- If the phone screen is locked, swipe down on the screen to reject the call, or swipe away from  to reject the call and send a message to the caller.

 **NOTE:**

To edit the preset text responses, open the **Phone** app and touch  > **Settings** > **Quick responses**.

Using Real-Time Text (RTT)

Your phone supports Real-Time Text. If you or person on the other end of the line has a hearing or speech impairment, you can use RTT on top of a voice call for a real-time conversation.

 **NOTES:**

- You can use RTT only when the phone is connected to the 4G LTE network or a Wi-Fi network (with Wi-Fi calling enabled).
- Text conversation will be on pause when the RTT call is on hold.
- Some RTT features and settings may not be supported under or across different networks.

Set Up RTT Work Mode

1. From the home screen, touch  >  > **Settings** > **Accessibility** > **Real-time text (RTT) call**.
2. Touch **RTT operation mode** and choose one of the following to set when RTT options should be available:
 - ▶ **Visible during calls:** In this mode, calls will be placed and answered as voice-only calls by default unless you receive an

incoming RTT call. You can still switch from voice-only to RTT during the calls. See [Switch From Voice-only Calls to RTT Calls](#).

- ▶ **Always visible:** In this mode, you may select the mode for outgoing calls.
3. When RTT operation mode is set as **Always visible**, touch **RTT on Outgoing Call** to set the default mode for outgoing calls. You can choose to place all outgoing calls as RTT calls automatically or choose manually each time before placing the call.

Place an RTT Call

When the RTT operation mode is set as **Always visible**, you can place an RTT call directly.

1. Enter the phone number with the dialpad as usual.
2. Touch .
3. If RTT on Outgoing Call is set as **Manual**, touch **RTT Voice call**.

When the call is connected, the RTT message screen and keyboard appear automatically.

Answer an RTT Call

Regardless of your RTT operation mode settings, an incoming RTT call is answered as an RTT call, with the RTT message screen and keyboard appearing automatically.

 **NOTE:**

This feature may not work under or across different networks.

If the RTT operation mode is set as **Always visible**, you can choose to answer incoming voice-only calls as RTT calls by touching **RTT ANSWER** (when the screen is unlocked) or swiping from  (when the screen is locked) at the bottom right.

Switch From Voice-only Calls to RTT Calls

During a voice-only call, touch  to start an RTT conversation. The voice conversation will not be affected. The other party can also make the switch, and your phone will show the message screen and keyboard automatically.

Working With the Call History

The call history is a list of all the calls you've placed, received, or missed. It provides a convenient way to redial a number, return a call, or add a number to your Contacts.

To open the call history, open the **Phone** app and touch  > **Call history**.

Place a Call From the Call History

1. Open the call history.
2. Touch a number for more options about the call, or touch  beside it to call back.

NOTE:

You can touch **MISSED**, **INCOMING**, or **OUTGOING** to filter the records by call type.

Save a Call History Number to a Contact

1. Open the call history.
2. Touch the number.
3. To add the number to an existing contact, touch **Add to a contact** and select a contact in the list. To add a new contact, touch **Create new contact**.
4. Edit the contact information if necessary, and touch **SAVE**.

Retrieve RTT Call Transcript

1. Open the call history.
2. Touch a number with  below it.
3. Touch **Call details**.
4. In the call list, touch  to check the transcript during that call.

Take Other Actions on a Call History Entry

1. Open the call history.
2. Touch a number and then touch **Call details** to view more call information. While viewing the call details, you can:
 - ▶ Touch **Delete** to delete the entry.
 - ▶ Touch **Edit number before call** to edit the number in the dialer before calling it.
 - ▶ Touch **Copy number** to copy the phone number to the clipboard.

 **NOTE:**

You can touch  > **Clear call history** in the call history screen to delete all history records.

Calling Your Contacts

1. From the home screen, touch .
2. Touch **Favorites** or **Contacts** to find the contact you want to call. Your favorite contacts and frequently called contacts are displayed in the **Favorites** tab.
3. Touch a contact in the **Favorites** tab, or touch  beside a contact in the **Contacts** tab.

Checking Voicemail

If you have set the phone to divert calls to voicemail, callers can leave voicemail messages when they cannot reach you. Here's how to check the messages they left.

1. From the home screen, touch  > .
2. Touch and hold the **1** key in the dialer. If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

 **NOTE:**

Please contact your mobile service provider for detailed information on setting up your voicemail.

Using Options During a Call

During a call, you will see a number of on-screen options. Touch an option to select it.

- Touch  to make another call separately from the first call, which is put on hold.
- Touch  to switch to the keypad when you need to enter a code (for example, the PIN for your voicemail or bank account) during the call.
- Touch  to go to **Contacts**.
- Touch  to mute or unmute your microphone.
- Touch  to turn the speakerphone on or off.
- Touch  to switch from voice-only calls to Real-Time Text (RTT) calls.

NOTE:

RTT only works on 4G LTE network or with Wi-Fi calling.

- Touch  > **Swap** or the held call near the top of the screen to put the caller you are speaking to on hold, and switch to the other call that has been put on hold.
- Touch  to merge the separate calls into a single conference call.
- Touch  to end the current call.
- During an RTT call, touch  > **Hide RTT keyboard** to close the RTT conversation and keyboard. You can then touch  to

restore the RTT conversation and keyboard.

- During an RTT call, touch  > **DTMF keypad** to use the keypad to interact with automated systems with DTMF tones. You can touch **Hide** to return to your RTT messages.

 **WARNING!**

Because of higher volume levels, do not place the phone near your ear during speakerphone use.

Managing Multi-party Calls

When the three-way call feature is available, you can switch between two calls or set up a conference call.

 **NOTES:**

- Options and interface will vary. The three-way call feature needs network support and may result in additional charges. Please contact your service provider for more information.
- Three-way call feature is not available when you have an ongoing RTT call.

Switch Between Current Calls

When you're on a call, you can place/answer a second call without ending the first one.

To place the second call:

Once you have established the first call, touch  and dial the second number.

To answer the second call:

When you're on a call and another call comes in:

- Swipe up to answer the call. (This puts the first call on hold and answers the second call.)
- Swipe from  to answer the call. (This ends the first call and answers the second call.)
- Swipe down to reject the second call.
- Swipe from  to reject the second call and select a preset text message or write one to send to the caller.

To switch between two calls:

If the second call is an incoming call, touch  > **Swap** or the held call near the top of the screen.

Set Up a Conference Call

With this feature, you can talk to two people at the same time.

1. Place the first call.
2. Once you have established the connection, touch  and dial the second number.
3. When you're connected to the second party, touch .

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

To end the conference call, touch .

Contacts

You can add contacts on your phone. To see your contacts, touch  on the home screen.

Checking Contact Details

1. From the home screen, touch .
2. Scroll through the list to view all your contacts.
3. Touch a contact to view its details.

Adding a New Contact

1. From the home screen, touch .
2. Touch  to add a new contact.
3. Enter the contact name and phone numbers. Touch **More fields** to enter other information.
4. Touch **SAVE** to save the contact.

Working With Favorite Contacts

You can mark contacts as favorite to put them at the top of the contacts list.

Add a Contact to Favorites

1. From the home screen, touch .
2. Touch a contact and then touch  at the top of the screen.

Remove a Contact From Favorites

1. From the home screen, touch .
2. Touch a favorite contact and then touch .

Managing Contacts With Labels

View Your Contact Labels

1. From the home screen, touch .
2. Touch  to view existing contact labels in the Labels section.
3. Touch a label to view contacts with that label.

NOTE:

To send a message to all contacts with the label, touch the label and touch  > **Send message**. Or touch the label and touch  >

Multi-select, check the contacts you need, and touch  > **Send message**.

Set Up a New Label

1. From the home screen, touch .
2. Touch  > **Create label**.
3. Enter the label name and touch **OK**.
4. Touch **ADD CONTACTS** or  and select the contact you wish to add the label to. To add multiple contacts, touch and hold one contact to select it. Then touch the other contacts and touch **ADD**.

Delete a Label

1. From the home screen, touch .
2. Touch  and then touch a label.
3. Touch  > **Delete label**.
4. Touch **OK**. The contacts themselves will not be deleted.

Edit a Label

1. From the home screen, touch .
2. Touch  and then touch a label.
3. Touch  > **Remove contacts** or **Rename label**.
4. Touch  to remove the corresponding contact from the label, or edit the label name and touch **OK**.

Managing Emergency Contacts and Information

You can set up your emergency contacts and medical information for medical personnel to access even when the phone is locked.

Add Emergency Contacts

You can add up to five contacts as emergency contacts.

1. Swipe up on the home screen and touch **Settings** > **About phone** > **Emergency Info** > **Add contact**.
2. From the contact list, touch the contact you wish to be an emergency contact.

Remove Emergency Contacts

1. Swipe up on the home screen and touch **Settings > About phone > Emergency Info**.
2. Touch  to remove the corresponding contact from the emergency contacts list.
3. Touch **REMOVE**.

Edit Emergency Information

1. Swipe up on the home screen and touch **Settings > About phone > Emergency Info > Add information**.
2. Enter your name, address, blood type, allergies, current medications, and other information that you think hospital personnel need to know in the corresponding fields.

Searching for a Contact

1. From the home screen, touch .
2. Touch  to search.
3. Enter the contact name or other information (such as phone number) you want to search for. The contacts matched will be listed.

Editing Contacts

Edit Contact Details

1. From the home screen, touch .
2. Touch a contact and then touch .
3. Edit the contact and touch **SAVE**.

Set a Ringtone for a Contact

Assign a special ringtone to a contact, so you know who is calling when you hear the ringtone.

1. From the home screen, touch .
2. Touch a contact you want to set a ringtone for, and then touch  > **More fields** > **Default ringtone**.
3. Select a ringtone you like and touch **OK**.
4. Touch **SAVE**.

NOTE:

When selecting ringtones, touch **Add ringtone** to select an audio file in your phone or microSDXC card.

Delete Contacts

1. From the home screen, touch .
2. Touch and hold the contact you want to remove.
3. Check more contacts if needed, and then touch  > **OK**.

Link Contacts

If there are duplicate entries for the same person in your contacts, you can merge all the separate information of a contact into one entry in the Contacts list.

1. From the home screen, touch .
2. Touch and hold a contact to select it.
3. Touch to select the duplicate contact(s).
4. Touch  > **LINK**. All selected contacts are merged into one entry in the contacts list.

Separate Contact Information

If contact information was linked in error, you can separate the information back into individual contacts on your phone.

1. From the home screen, touch .
2. Touch a linked contact you want to separate.
3. Touch  > **View linked contacts** > **UNLINK**.
4. Touch **UNLINK** to confirm.

Messaging

You can use Messaging to exchange text messages (SMS) and multimedia messages (MMS).

Opening the Messaging Screen

Touch  on the home screen.

The Messaging screen opens, where you can create a new message or open an existing conversation.

- Touch  to write a new text or multimedia message.
- Touch an existing conversation to open the exchanged messages.

Sending a Message

1. On the Messaging screen, touch .
2. Add recipients in one of the following ways.
 - ▶ Manually enter the recipient's number or the contact name. If the phone presents a few suggestions, touch the one you want to add.
 - ▶ Touch a contact listed below the To field. You can select a recent contact or from all contacts.
 - ▶ To add more recipients for a group conversation, touch  to add more recipients and then touch .

3. Touch the Send message field and enter the message text. Touch  to add emoji to your text message.
4. Touch .

Replying to a Message

Messages you receive are appended to existing conversations of the same number. If the new message comes from a new number, a new conversation is created.

1. On the Messaging screen, touch the conversation that has the message you want to reply to.
2. Type your reply in the text field at the bottom.
3. Touch .

Forwarding a Message

1. On the Messaging screen, touch the conversation that has the message(s) you want to forward.
2. Touch and hold one message you want to forward, and then touch .
3. Touch the conversation you'd like to forward the message(s) to, or touch  to enter new recipient(s).
4. Edit the message if necessary and touch .

Deleting Messages or Conversations

Delete a Message in a Conversation

1. On the Messaging screen, touch a conversation.
2. Touch and hold the message you want to delete.
3. Touch  > **DELETE**.

Delete Message Conversations


1. On the Messaging screen, touch and hold the conversation you want to delete.
2. If there are more conversations you want to delete, touch them one by one.
3. Touch  > **DELETE**.

Camera

You can take photos and record videos. Photos and videos are stored on the microSDXC card, if you have installed one, or to the phone's internal storage. You can copy them to your computer or access them in the Gallery app.

Capturing a Photo

1. Touch  on the home screen.
2. Aim the camera at the subject and make any necessary adjustment. PHOTO (auto camera) mode is used by default.
3. Touch the area where you want the camera to focus, or leave the camera to autofocus on the center of the image.

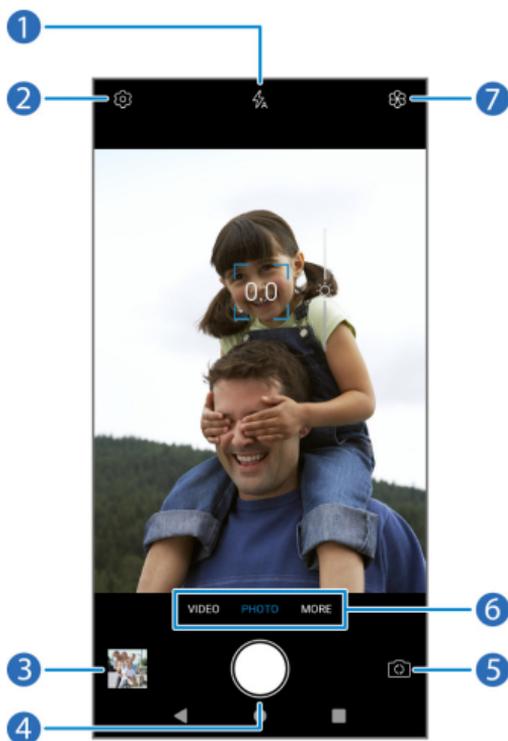

Number	Function
1	Change the flash setting.
2	Change the camera settings.
3	View pictures and videos you have taken.
4	Capture a photo.

5	Switch between the front and back cameras.
6	Switch among the default PHOTO mode, VIDEO mode, and more.
7	Select a filter.

4. Lightly touch  to take the picture.

 **WARNING!**

Keep a safe distance when using the flash. Do not point the flash toward the eyes of people or animals.

 **NOTES:**

- You can pinch or spread your fingers on the screen to zoom in or zoom out before taking a picture.
- In PHOTO (auto camera) mode, when you touch the screen to focus, the exposure bar appears beside the focus point. You can drag  up or down to adjust the exposure.

Using Manual Camera Mode

You can use Manual camera mode to adjust more camera options for your photo.

1. From the home screen, touch  > **MORE** > **MANUAL**.
2. Aim the camera at the subject. You can make the following adjustments.
 - ▶ Drag the yellow circle to any area on the screen where you want the camera to meter exposure so as to adjust the photo brightness. Touch and hold the circle to lock exposure.
 - ▶ Drag the blue square to any area on the screen that you want to focus on. Touch and hold it to lock or unlock the focus.
 - ▶ Touch the icons near the bottom of the preview area and drag the sliders to adjust ISO, exposure, white balance, and interval for taking consecutive shots.
3. Touch  to take the photo.

Recording a Video

1. From the home screen, touch  > **VIDEO**.
2. Aim the camera at the subject.
3. Touch  to start recording. You can also touch  or  to pause or resume recording, or touch  to save the frame as a photo.
4. Touch  to stop recording.

NOTES:

- You can pinch or spread on the screen or press the **Volume** key to zoom in or zoom out before and during recording.
- When you touch the screen to focus during recording, the exposure bar appears beside the focal point. You can drag  up or down to adjust the exposure. Touch and hold the focal point to lock/unlock the focus.
- To capture a time-lapse video, touch **MORE > TIMELAPSE** below the preview area. Adjust the time interval. Then touch  to begin recording and  to stop. You can also touch  to save the frame as a photo.

Customizing Camera and Video Settings

Before capturing a photo or video, you can touch  to open the following options.

NOTE:

Some camera and video options will change in different camera modes.

Options in Photo Mode (Back Camera)

- **Resolution:** Set the resolution for your photo.
- **Timer:** Set a time delay before the camera takes a picture automatically after you touch the shutter icon.
- **Composition:** Show or hide the grid or golden spiral to help with balanced photo composition.

- **Gradients:** Show or hide the grader.
- **Volume key:** Assign the function of the **Volume** key.

Options in Selfie Mode (Front Camera)

- **Resolution:** Set the resolution for your photo.
- **Timer:** Set a time delay before the camera takes a picture automatically after you touch the shutter icon.
- **Point-and-shoot:** When this feature is enabled, you can touch the viewfinder screen to take a photo.
- **Mirror image:** When enabled, allows you to capture a photo that is the same as the viewfinder preview.
- **Volume key:** Assign the function of the **Volume** key.

Options in Video Mode (Front or Back Camera) and Timelapse Mode

Video quality: Set the quality for your video.

Options in Manual Mode (Back Camera)

- **Resolution:** Set the resolution for your photo.
- **Timer:** Set a time delay before the camera takes a picture automatically after you touch the shutter icon.
- **Metering:** Adjust the light metering setting.
- **Composition:** Show or hide the grid or golden spiral to help with balanced photo composition.

- **Gradients:** Show or hide the gradienter.
- **Volume key:** Assign the function of the **Volume** key.

General Options

- **Shutter tone:** Turn the shutter tone on or off.
- **Anti-banding:** Set the anti-banding value when you take pictures or videos of TV or computer screens to avoid stripes on the screen.
- **Save location:** Change the storage location for captured photos and videos.
- **Help:** Enable the Help icon on the viewfinder screen, or touch **More** to view help details.
- **Restore defaults:** Restore default camera and video settings.

Gallery

Opening Gallery

Touch  on the home screen to view your pictures and videos. Touch **Photos** to view the contents captured with the phone cameras, or touch **Albums** to check all images and videos on the phone.

Working With Albums

View Album Contents

In Albums view, touch an album to view the pictures and videos it contains.

Delete Albums, Pictures, or Videos

1. Touch and hold an album, picture, or video to select it.
2. Touch more items that you want to delete.
3. Touch  > **DELETE**.

Working With Pictures

Touch a picture to view it in full screen. Double-tap the picture, or pinch two fingers together or spread them apart to zoom out or in. Slide left or right to view other pictures and videos in the album.



Number	Function
1	Touch to return to the album.
2	Delete the picture.
3	Edit the picture.
4	Touch to rename or rotate the picture, set it as wallpaper or contact photo, check file details, or browse the album contents in a slideshow.
5	Add the picture to or remove it from the Favourite album.



NOTES:

- Pinch a picture or video to make it smaller. You'll then see a filmstrip-style view of all your pictures and videos in a row. Swipe left or right to scan through them all.
- You can delete a picture or video by swiping it up in the filmstrip view. If you accidentally delete one, touch **Undo** to retrieve it.
- Not all options may be available for certain albums or pictures.

Retouching Your Pictures

You can edit any photos you took and some other pictures in Gallery with Photo editor. The changed picture is saved in the same album as the original one, while the original is never affected.

1. While viewing a picture in full screen, touch the screen and touch .
2. Touch the options along the bottom of the screen to edit the picture.

Rotate	Rotate or flip (mirror) the picture.
Cropping	Crop the picture to different aspect ratios.
Filter	Apply different filters to the picture.
Adjust	Adjust brightness, contrast, sharpness, and other light options.
Blur	Select blur area and apply blur effect.

Mosaic	Use mosaic, brush or blur to the area you swipe or touch.
Doodle	Select a color and draw something opaque or translucent over the picture.
Text	Add text with optional bubbles or banners on the picture.

3. Touch  to keep the change or  to cancel it.
4. Touch  to save the new picture.

 **NOTE:**

Touch  in the Photo editor screen to see the edits you have made and undo or redo them.

Music

Touch **Music** on the home screen to play audio files stored on your phone.

Viewing Your Music Library


Open **Music**, and your music library is displayed. You can touch **All songs** to view all your audio files by name, artist, album, or genre. You can also touch **Favorites**, **Recently played**, **Folders**, or **Playlists** to browse music files you have marked as favorite, recently played music, music files in folders, or playlists you have created.

NOTE:

If an audio file is being played, its name and player controls are displayed at the bottom of the music library. Touch the area to open the playback screen.

Playing Music

Touch a song in the music library to listen to it. Touch the playback control at the bottom of the screen to open the following playback screen.

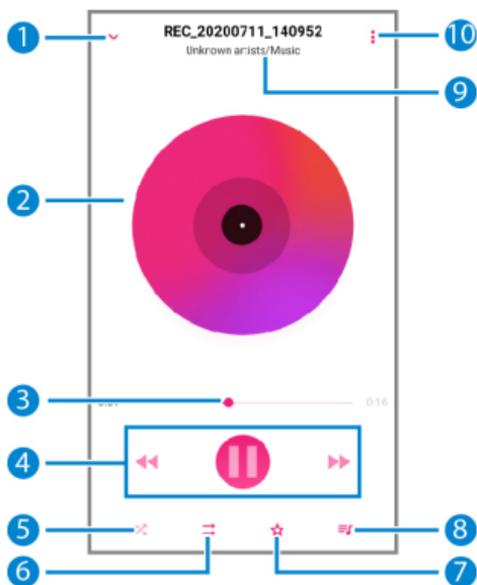

Number	Function
1	Touch to go back to the music library.
2	Album artwork (if available).
3	Drag the slider to jump to any part of the song.
4	Playback control. Skip songs or pause and resume playback.
5	Turn shuffle on or off.
6	Toggle repeat mode: repeat the current song, repeat the playlist, or turn off repeat.
7	Add the song to or remove it from Favorites.

8	View the current playlist.
9	Song, album, and artist information.
10	Access additional options.

Managing Playlists

Create playlists to organize your music files into sets of songs, so that you can play the songs you like in the order you prefer.

- From any music library category, touch  > **Add to** next to a song to add it to a playlist or create a new playlist.
- In the Playlist section of the music library, touch a playlist and touch  next to the playlist name to add more songs to the playlist, edit the name of the playlist, or delete it.
- Open a playlist and you can then touch  next to a song and select **Remove** to take the song off the playlist.

Video Player

Use the Video app to manage your video library and to watch videos.

Opening the Video Library

Swipe up on the home screen and touch **Video** to view your video library. Swipe up or down to find the video you want. You can touch  /  to change the display mode. You can also touch  to search for video files, view all videos or by folder, sort the video files, or change video player settings.

Playing and Controlling Videos

Touch a video in the video library to play it. Touch the screen to show the playback controls. You can control the video and audio or carry out other operations.

- Touch  or  to skip to the previous or the next video.
- Touch  or double-tap the video to pause.
- Touch  to fit the video to the full screen.
- Touch  to play the video in picture-in-picture mode, where the video plays in a window on top of other apps you're using.

 **NOTE:**

Touch  to return to the normal playback screen from picture-in-picture mode.

- Touch  to hide playback controls.

- Touch  to change the playback speed.
- Touch  to take a screenshot.

 **NOTES:**

- Slide horizontally on the video to rewind or fast forward.
- Slide vertically on the right or left part of the screen to adjust volume or brightness, respectively.
- Spread or pinch two fingers on the video to zoom in or out.

Managing Video Files

Delete or Share Videos

1. In the video library, touch and hold a video.
2. Touch other videos you want to delete or share, if necessary.
3. Touch  > **DELETE** to delete or  to share.

Trim a Video

1. Touch a video to start playing it.
2. Touch  > **Trim**.
3. Drag  or  on the progress bar to select the portion you want to keep. You can touch  to preview the selected portion.
4. If necessary, touch  to change the video resolution.
5. Touch . The trimmed video is saved as a new video file.

Rename a Video

1. Touch and hold the video you want to rename.
2. Touch  > **Rename**.
3. Type the new video name and touch **OK**.

View Details of a Video

1. Touch and hold the video for which you want to view details.
2. Touch  > **Details**.
3. Touch **OK** to close the window.

Voice Recorder

Voice Recorder enables you to record and listen to voice memos.

Recording a Voice Memo

1. Swipe up on the home screen and touch **Voice Recorder**.
2. Touch  to select the audio format of the recording.
3. Touch  to start recording. During recording, you can do the following:
 - ▶ Touch  or  to pause or continue the recording.
 - ▶ Touch  or  to add an empty tag or photo tag to the recording.

NOTE:

If ringtone and notification sounds are enabled before the recording, they will be temporarily turned off during it to avoid interference. Your phone will still vibrate for calls and notifications.

4. Touch **DONE** to stop recording.
5. Edit the file name and touch **SAVE** to save the recording.

If you don't want to save the memo after recording it, touch **DELETE > DELETE** to delete it.

Playing a Voice Memo

1. Touch  at the top right of the screen to see all recordings.
2. Touch the title of a memo to play it. During the playing, you can touch  to change the play speed, or touch  or  to add tags.

NOTE:

Touch **View tag** to check all time tags. You can touch “+” after an empty tag to add an image or text, touch an image to delete it or replace it with another image, or touch and hold a tag to delete it.

Trimming a Voice Memo

1. While playing a recording, touch  to open the editing screen.
2. Drag  or  to trim the recording. You can touch  to preview the trimmed recording.
3. Touch **TRIM**.
4. Edit the new file name and touch **SAVE**.

More Apps

Calculator

Swipe up on the home screen and touch **Calculator** to use the built-in calculator for some basic as well as advanced mathematical equations.

 **NOTE:**

To see more calculator options, swipe left while holding the phone in portrait view or turn the phone to landscape view.

Calendar

Swipe up on the home screen and touch **Calendar** to organize your time and reminds you of important events with the built-in Calendar.

Clock

Swipe up on the home screen and touch **Clock**. The Clock app allows you to check local time in places around the world, set alarms, and use timers.

Set a New Alarm

1. Open the Clock app and touch the **Alarm** tab.
2. Touch a default alarm to configure it, or touch  at the bottom of the screen to create a new alarm.

3. Set up the alarm options, such as time, repeat, snooze, alarm ringtone, vibration, and label.
4. Touch **SAVE** to save and turn on the alarm.



NOTES:

- To enable or disable existing alarms directly, touch the switches on the right side of each alarm.
- Touch  to set more alarm options in the Alarm section.
- To change the default alarm ringtone, swipe up on the home screen and touch **Settings > Sound > Advanced > Ringtones > Default alarm sound**.

Check World Time

1. Open the Clock app and touch the **World clock** tab.
2. World time lets you check local times for cities around the world. Touch  to add a new city.

Use Stopwatch and Countdown

1. Open the Clock app and touch **Stopwatch** or **Timer**.
2. Use the stopwatch to record lap times (up to 100 laps), or use the countdown feature to set a time and count down to zero.

Configure the Clock App Settings

Open the clock app and touch  to access options for alarms and timers.

File Manager

Quickly access all of your images, videos, audio clips, and other types of files on your phone and on the memory card.

Swipe up on the home screen and touch **File Manager**. Then touch a file type to find the file you need by category, or touch **Phone** or **SD card** to browse folders and files on the phone or the microSDXC card.

- Touch folders and files to open them.
- Touch and hold an item or touch  > **Multi-Select** to access options such as copy, move, compress, share, rename, delete, add to favorite, or add as a shortcut to the home screen.
- To copy or move an item, touch and hold the item, touch  > **Move** or **Copy**, navigate to a new location, and touch **PASTE**.
- Touch  to create a new folder in the current directory.
- Touch  to search for a file or folder by name.
- Touch  > **Sort by** to change the order of the items in the list.
- Touch  in the root directory and switch on **Show local hidden files** or **Hide small pics** to display hidden system files and folders or hide small picture files.

FM Radio

With the FM radio, you can search for radio channels, listen to them, and save them on your phone. Note that the quality of the radio reception depends on the coverage of the radio stations in your area. A wired headset works as an antenna, so always connect a headset when using the FM radio.

Scan and Save channels

1. Swipe up on the home screen and touch FM Radio while a wired headset is plugged in.
2. Touch  > **Scan**. Your phone scans for all available channels and saves them to the All channels list.

NOTE:

When you open the FM Radio app for the first time, it will automatically scan for channels and show the All channels list. You can also touch  > **All channels** to view the list.

Listen to FM Radio

1. Open FM Radio while the headset is connected.
2. Touch  > **All channels** and select a channel.

You can also drag the frequency panel or touch  or  to switch to other channels. Touch  or  to adjust the channel frequency.



NOTES:

- Touch  to add the channel to Favorites, which are displayed at the bottom of the FM Radio screen.
- Touch  to listen to the radio through the phone speaker.

Other Options and Settings

To set the FM frequency range:

FM radio frequency ranges differ in different regions. Touch  > **FM frequency range** and select an option.

To turn off FM radio automatically:

Touch  > **Auto off** and set the time you want to turn off the FM radio.

A count-down clock appears above the frequency and the radio is turned off when the clock counts down to 0:00.

To turn off FM radio immediately:

Touch  > **Exit**.

Settings

Swipe up on the home screen and touch **Settings**. Settings contains most of the tools for customizing and configuring your phone. In some menus, you may need to touch **Advanced** to see all the options.

Network

Wi-Fi

Open **Settings** and touch **Network > Wi-Fi** to turn Wi-Fi on or off and configure your Wi-Fi connections (see [Connecting to Wi-Fi](#)).

Mobile Network

Open **Settings** and touch **Network > Mobile network** to select network and network type, or view access point names (see [Connecting to Mobile Networks](#)).

Airplane Mode

Open **Settings** and touch **Network > Airplane mode** to turn airplane mode on or off. All the phone's radios (such as cellular, Wi-Fi, and *Bluetooth*) that transmit voice or data are turned off when airplane mode is on.

Call Settings

Open **Settings** and touch **Network > Call settings** to configure call options. You can also access these options from the Phone app by touching  (next to **Search contacts**) > **Settings > Call settings**.

Private DNS

Open **Settings** and touch **Network > Private DNS** to turn Private DNS on or off or change the DNS provider hostname. Using private DNS is a way to secure your Internet communication.

Wireless Emergency Alerts

Open **Settings** and touch **Network > Wireless Emergency Alerts** to manage options for receiving emergency alert messages.

Connected Devices

Open **Settings** and touch **Connected devices** to manage your phone's connection via *Bluetooth* and USB. You can touch **Pair new device** to pair new *Bluetooth* headsets or touch **Connection preferences** to configure *Bluetooth* settings. See [Connecting to Bluetooth Headsets](#).

When your phone is connected to a computer via USB, you can also touch **Connected devices > USB** to manage the USB connection mode. See [Connecting to Your Computer via USB](#).

Battery

Open **Settings** and touch **Battery** to view the battery level, enable different battery saving modes, or optimize apps and display to improve battery life.

Features

Open **Settings** and touch **Features**. The following features are available.

- **System navigation:** Change the navigation bar style for the phone and learn how to use.
- **One-handed mode:** When the system navigation is set to Virtual navigation, you can touch and hold the **Back** key to turn on one-handed mode.
- **Scheduled power On/Off:** Set the day and time when the phone automatically powers on or off. Touch the switches on the right to turn the features on or off.

Display

Open **Settings** and touch **Display** to configure the display options, including brightness level, Night Light mode, dark theme, wallpaper, screen sleep time, font size, and more.

Sound

Open **Settings** and touch **Sound** to adjust different types of volume (see [Adjusting Volumes](#)), set notification mode (see [Switching to Silent or Vibration Mode](#)), set Do Not Disturb options (see [Using Do Not Disturb Mode](#)), set up sound for calls, notifications, and alarms (see [Changing the Ringtone, Notification Sound, or Alarm Sound](#)), or select system sounds (see [Turning System Sounds On/Off](#)).

Storage

Open **Settings** and touch **Storage** to check memory information for your microSDXC card and phone storage.

You can choose the default location for new data, such as recorded voice memos. Touch **Saving location** and select to store items in the phone storage or the installed microSDXC card.

Under Device storage, touch **Internal shared storage** to get a detailed breakdown of space usage by type. Touch **FREE UP SPACE** to delete the files you do not need.

Under Portable storage, safely mount, unmount (remove), and format your microSDXC card. For more information about using the device storage and the microSDXC card, see [Using the microSDXC Card as Portable or Device Storage](#).

Privacy

Open **Settings** and touch **Privacy** to manage app permissions, lock screen notifications, and password display.

Location

Open **Settings** and touch **Location** to manage location services to help your phone and apps determine your location. To use location-related applications, you must have location services turned on.

You can also check the apps that recently requested your location data, manage location permission for each app, and turn on/off Wi-Fi and *Bluetooth* scanning.

Security

Open **Settings** and touch **Security** to configure the following options that help keep your phone and data safe.

- **Screen lock:** Secure your phone and personal information with a screen lock (see [Protecting Your Phone With Screen Locks](#)).

Touch  beside **Screen lock** to set the following options.

- ▶ **Make pattern visible:** Show the pattern as you draw it. This option is available when unlock pattern is set.
- ▶ **Automatically lock:** Set the time needed for the lock protection to be activated after the screen turns off. This option is available when unlock pattern, PIN or password is set.
- ▶ **Power button instantly locks:** Lock protection is activated immediately when you press the **Power** key. This option is available when unlock pattern, PIN or password is set.
- **Fingerprint:** Enable the swipe functions of the fingerprint sensor. Register up to 5 fingerprints for unlocking the phone or opening bound apps. See [Using Your Fingerprint](#).
- **Device admin apps:** Activate or deactivate apps to be device administrators.
- **SIM card lock:**
 - ▶ **Lock SIM card:** Activate or deactivate the PIN lock to require PIN before accessing the nano-SIM card.
 - ▶ **Change SIM PIN:** Change the PIN used to access the nano-SIM card.

NOTE:

Put all your confidential passwords in a safe place for future use. If you enter the wrong SIM PIN more times than allowed, your nano-SIM card will be locked and you cannot access the mobile network. Contact your operator for a PIN Unlock Key (PUK) to restore the nano-SIM card.

- **Encryption & credentials:** Check the encryption status of your phone and set the credential storage options.
- **Trust agents:** Activate or deactivate trust agents.
- **Screen pinning:** Keep a screen of your choice in view so that others cannot switch to other apps and access personal information (see [Protecting Your Phone With Screen Pinning](#)).

Accessibility

Open **Settings** and touch **Accessibility** to configure the system accessibility options and accessibility plug-ins on your phone, such as using **Color inversion** or **Font size** for users with sight problems.

System

Languages & Input

Open **Settings** and touch **System > Languages & input** to configure options related to system language, input methods, dictionary and spell checker, as well as mouse/trackpad input.

Date & Time

Open **Settings** and touch **System > Date & time** to set date, time, time zone, and how time is displayed. You can also use network-provided data (see [Setting the Date and Time](#)).

Reset Options

Open **Settings** and touch **System > Reset options** to reset network settings, app preferences, system settings, or the phone to factory default status.

About Phone

Open **Settings** and touch **About phone** to view important phone information. You can also personalize your phone name or edit emergency contacts and medical information for first responders to read and call without unlocking your phone.

Troubleshooting

If you encounter problems while using the phone, or if it performs abnormally, you can refer to the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.

Problem	Possible Causes	Possible Solution
Poor reception	The network signal is too weak at your current location (for example, in a basement or near a tall building) because wireless transmissions cannot effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.

Problem	Possible Causes	Possible Solution
Echo or noise	Poor network link quality on the part of your service provider.	End the call and dial again. You may be switched to a better-quality network link or phone line.
	Poor local telephone line quality.	End the call and dial again. You may be switched to a better-quality network link or phone line.
Unable to select certain features	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.
Cannot charge the battery	The battery or battery charger is damaged.	Contact the dealer.
	The phone's temperature is below 32°F (0°C) or higher than 95°F (35°C).	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to ensure that all connections have been properly made.

Problem	Possible Causes	Possible Solution
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily power off the phone.
	The battery is depleted. In high temperature environments, battery life will be shortened.	Contact the dealer to change a new battery.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible, or temporarily turn off your phone.
Cannot turn your phone on	Battery power has been depleted.	Recharge the phone's battery.

Problem	Possible Causes	Possible Solution
nano-SIM card error	The nano-SIM card has malfunctioned or is damaged.	Take the nano-SIM card to your service provider for testing.
	The nano-SIM card is inserted improperly.	Insert the nano-SIM card properly.
	Debris is on the nano-SIM card contacts.	Use a soft, dry cloth to clean the nano-SIM card contacts.
Unable to connect to the network	The nano-SIM card is invalid.	Contact your service provider.
	You are not within the network's service area.	Check the service area with your service provider.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.
Cannot answer incoming calls	You have activated the Call blocking feature.	Disable this feature. Open the Phone app and touch  > Settings > Blocked numbers . Touch  > UNBLOCK next to the number you want to unblock.

Problem	Possible Causes	Possible Solution
PIN Code blocked	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the nano-SIM card's PUK code, use the PUK code to unlock the nano-SIM card.
Phone crashes, reboots, freeze, or cannot be powered on	Some third-party software is not compatible with your phone.	Uninstall the software that may cause the problem.
		Upgrade the phone software.
		Reset the phone to factory status.

For Your Safety

General Safety

	Don't make or receive phone calls while driving. Never text while driving.
	Keep your phone at least 15 mm away from your body while making calls.
	Small parts may cause choking.
	Your phone can produce a loud sound.
	To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your phone near your ear while the loudspeaker is in use.
	Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.
	Turn off when asked to in hospitals and medical facilities.
	Turn off when told to on aircraft and at airports.
	Turn off when near explosive materials or liquids.

	Don't use at gas stations.
	Your phone may produce a bright or flashing light.
	Don't dispose of your phone in fire.
	Avoid extreme temperatures.
	Avoid contact with liquids. Keep your phone dry.
	Do not attempt to disassemble your phone.
	Only use approved accessories.
	Don't rely on your phone as a primary device for emergency communications.

Radio Frequency (RF) Energy

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 0.6 inches (15 mm). Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can

be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

This device is complied with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and had been tested in accordance with the measurement methods and procedures specified in IEEE1528.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on **FCC ID: SRQ-Z5157V**.

For this device, the highest reported SAR value for usage against the head is **1.20 W/kg**, and for usage near the body is **1.14 W/kg**.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirements.

SAR compliance for body-worn operation is based on a separation distance of 0.6 inches (15 mm) between the unit and the human body. Carry this device at least 0.6 inches (15 mm) away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a

separation of 0.6 inches (15 mm) between this device and your body. RF exposure compliance with any body-worn accessory that contains metal was not tested and certified, and use of such body-worn accessory should be avoided.

FCC Regulations

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

! **CAUTION:**

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Hearing Aid Compatibility (HAC) Regulations for Mobile Phones

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components. Your phone is compliant with FCC HAC regulations (ANSI C63.19- 2011).

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

These ratings are not guaranteed. Results will vary, depending on the level of immunity of your hearing device and the degree of your hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/ higher of the two ratings. (Note that not all hearing devices contain telecoils.)

Your phone has been tested for hearing aid device compatibility and has an **M4/T4** rating.

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device.

For additional information about the FCC's actions with regard to hearing aid compatible wireless devices and other steps the FCC has taken to ensure that individuals with disabilities have access to telecommunications services, please go to www.fcc.gov/cgb/dro.

CTIA Requirements

- Do not disassemble or open, crush, bend or deform, puncture or shred the battery.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazards.
- Only use the battery for the device for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazards.
- Do not short-circuit the phone or allow metallic conductive objects to contact the charging terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazards. Only authorized service providers shall replace the battery. (If the battery is non-user replaceable).
- Promptly dispose of used batteries in accordance with local regulations.

- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazards.
- The phone shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

Distractions

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands-free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep them in a clean place.
- Keep the screen and camera lens clean. An unclean screen or camera lens may slow down the phone's reaction to your operations or interfere with the image quality.
- Clean your phone and its accessories with a soft material such as cleaning cloth for eyeglass lenses. Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories.

Only authorized personnel can do so.

- Do not place your phone inside or near heating equipment or high-pressure containers, such as water heaters, microwave ovens, or hot cooking utensils. Otherwise, your phone may be damaged.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Battery Safety

- Using ZTE-unapproved or incompatible battery, charger or power adapter may damage your device, shorten its lifespan or cause a fire, explosion or other hazards.
- The recommended operating temperatures are 0 °C to 35 °C and the storage temperatures are -20 °C to +45 °C. Extreme temperatures can damage the device and reduce the charging capacity and lifespan of your device and battery.
- Do not place the device or the battery in or near heating equipment, such as microwave ovens, stoves or radiators. Keep the device and the battery away from excessive heat and direct sunlight. If not, the device or the battery may overheat and cause explosion or fire.
- Please disconnect the charger when the battery is fully charged. Overcharging may shorten the battery life.
- Do not short-circuit the battery, as this can cause excessive heat and fire.
- Do not throw the battery into a fire to avoid explosion.

- Do not disassemble, squeeze or puncture the battery, as this can cause explosion or fire.
- When not using the device for a long period, please charge the battery about half and then remove the battery from your device and store it in a cool dry place.
- If the battery damages or shows signs of swelling or leakage, please stop use immediately and contact ZTE or a ZTE-authorized service provider for replacement.
- Return the worn-out battery to the provider or put it in the designated recycle place. Do not put it in household waste.
- There is a risk of explosion if the wrong battery model is replaced.

 **WARNING!**

If the battery is broken, you should avoid contact with the contents inside. If they contaminate the skin, immediately rinse with plenty of water and seek medical help when necessary.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone. Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the metal connectors on the nano-SIM card and the microSDXC card.

Antenna

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

Airbags

Do not place a phone in the area over an airbag or in the airbag deployment area, as an airbag inflates with great force and serious injury could result. Store the phone in a safe and secure area before driving your vehicle.

Seizures/Blackouts

The phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician. To reduce the risk of blackouts or seizures, use your phone in a well-lit room and take frequent breaks.

Repetitive Strain Injuries

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take frequent breaks to stretch and relax.

Emergency Calls

This phone, like any other wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, *Bluetooth* headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories. Do not connect with incompatible products or accessories. Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the charging port. Never puncture the surface of the phone with sharp objects.

Connection to Vehicles

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories. Only qualified personnel can service or repair the phone or its accessories. If your phone (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

Radio Frequency Interference

General Statement on Interference

Care must be taken when using your phone in close proximity to personal medical devices, such as pacemakers and hearing aids. Please consult your doctor and the device manufacturers to determine if the operation of your phone may interfere with the operation of your medical devices.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 cm) be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby. The level of interference will depend on the type of hearing device and the distance from the interference source. Increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Equipment

Turn off your wireless device when you are requested to do so in hospitals, clinics or healthcare facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Turn off your wireless device whenever you are instructed to do so by airport or airline staff. Consult the airline staff about the use of wireless devices onboard the aircraft and enable airplane mode of your phone when boarding an aircraft.

Interference in Vehicles

Please note that because of possible interference with electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Gas Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment. Areas with potentially explosive atmospheres include fueling areas, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas where signs are posted to power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.